
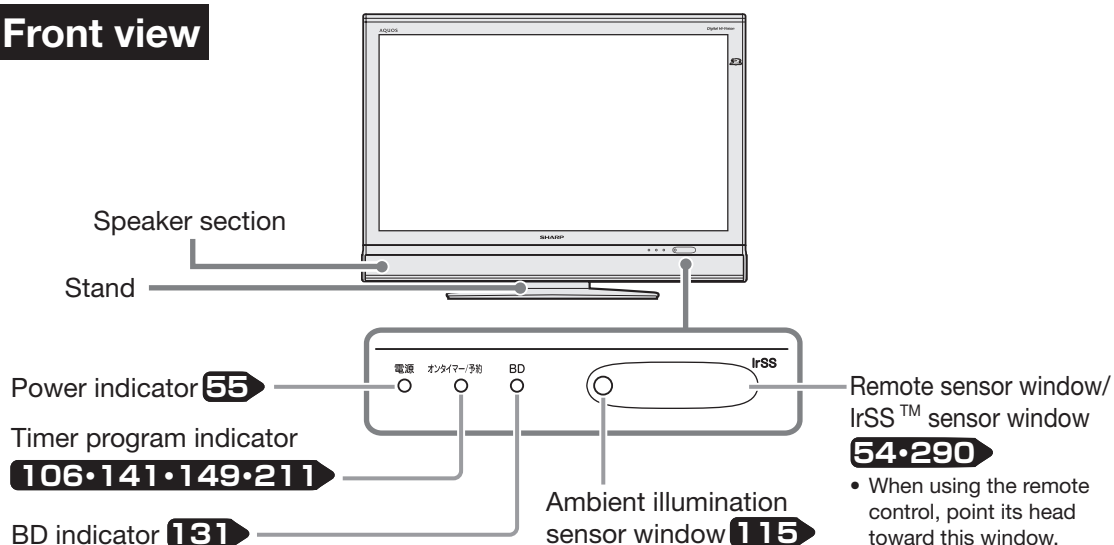


Part Names - Main Unit English Guide

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view



Adjusting the LCD panel angle


- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Right side view

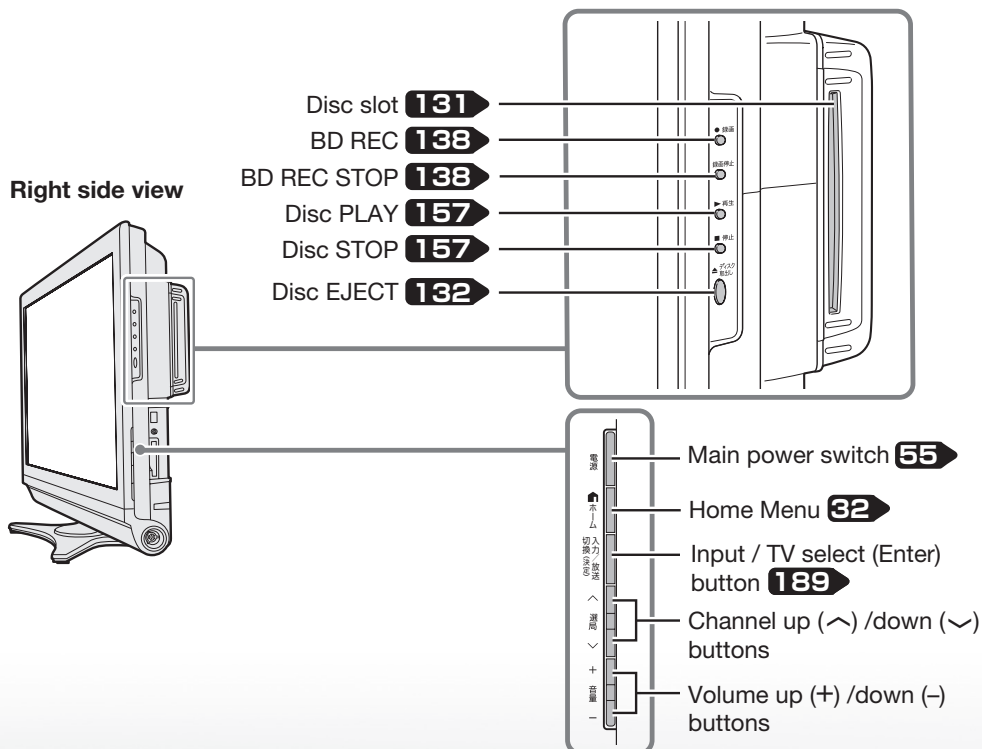

Side view

As shown below, LC-32DX2 has its B-CAS card slot on the right side of the TV, while LC-26DX2's is located on the left side.

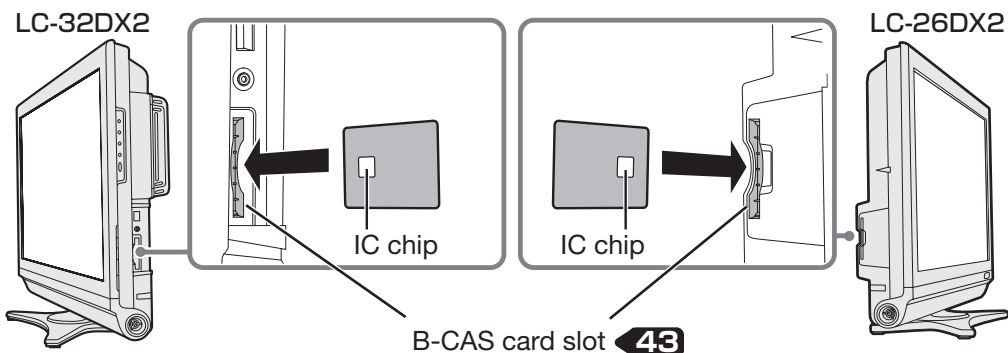

Back view

The illustrations below are those of LC-32DX2. LC-26DX2 has the same layout of jacks and terminals as 32DX2.

Connect a Blu-ray Disc player, AV amplifier, etc.

AV in 1 and 2 (HDMI)
50・186・187・193・198・206

LAN jack
(10BASE-T/100BASE-TX)
241

Digital audio output jack
(optical)
195

RS-232C
223

AV in 3
50・186・193

Connect a recorder

AV in 4/
Monitor out (REC OUT)
186・193・196

AV in 4
186・193

BS-CS 110 antenna input
terminal
47~49

PC input (audio)
198・199・204

AV in 5 (PC)
199



VHF-UHF antenna input
terminal
46~49

Connect the telephone line

Telephone line jack
231・241

Connect the AC cord

AC cord connector
(AC 100V) **51**

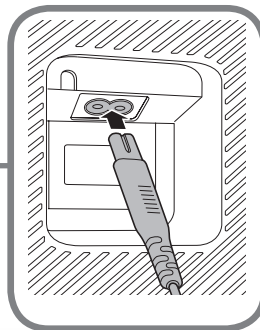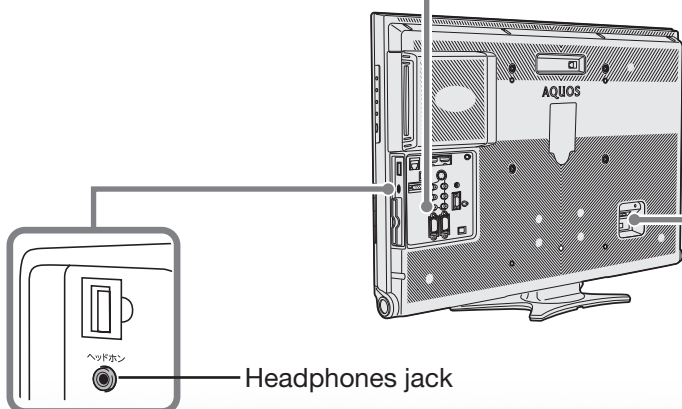

The provided power connector may have different shape from that shown in the drawing.

はじめに

準備

番組を見る

録画・予約録画

再生

リモコン機能で

リモコン機能で

リモコン機能で

リモコン機能で

リモコン機能で

リモコン機能で

Part Names - Remote Control Unit

Active/Standby **55**

Press to engage the TV set in the active or standby mode.

Channel select **86**

- Press to select a channel.
- Use to input a number for various settings.

Terrestrial analog/Terrestrial

Digital/BS/CS **85**

Select the CS digital channel for the first time. **60**

Linked data broadcast

90・105・169

Mute **86**

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Volume up (+)/down (-) **86**

Press to adjust the volume.

EPG **92・94・140・211**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast. Select a future program in EPG to set a timer program.

Finish **32**

Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

List the programs recorded on a BD **157**

Display the Top Menu of the disc **161**

Display **87**

Press to display or turn off the channel call, etc.

Play back programs recorded on a disc **156**

Fast forward, rewind, etc. during playback **166~168**

See Page **85** for how to select a program.

View the Internet or IPTV **247・267**

Input select **189**

Channel up (^)/down (v) **86**

Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

Display the "Home" Menu **32**

Press to start some useful operations of the TV.

Cursor (up, down, left, right) **32**

Enter/Confirm **32**

Return **32**

Color **94~95・105**

Use to operate EPGs and data program screens.

Display the Tool Menu **30**

REC **138**

REC STOP **138**

Buttons under the cover

Hold the cover by the projections () and lift.

AV mode select **112**

Audio select **102・103・169**

Picture select **103・170**

Caption **103・170**

Sleep timer **221**

Freeze **104**

View status of the BD **148**

Display the Pop-up Menu (BD) or Disc Menu (DVD) **161**

Display the Playback Menu **171**

Screen mode **109・200**

Other on-air programs **93**

Media select **85**

CATV **88**

Digital channel number input **89**

Display the operation panel of VOD **275・279**

Eject the disc **132**

Familink **210~216**


Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

Switching the Display Language to English

ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。

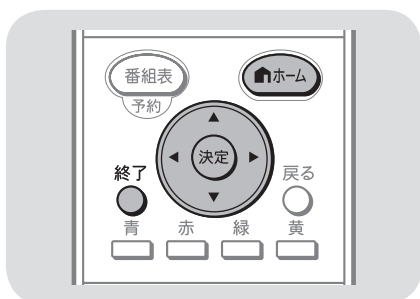

おしらせ

誤ってホームメニューを英語にしてしまったときは

- ・ホームメニューから「Setup」－「 (Change Function)」－「Menu Design」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press




and select with



Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ

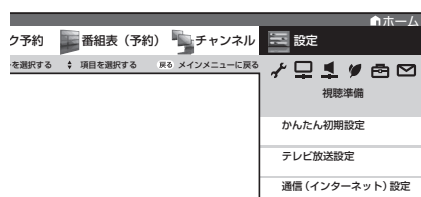


2

Select with



Select “ (機能切換)” (Change Function).

(機能切換) を選ぶ

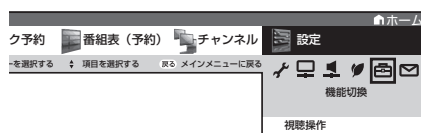

3

Select with




Press



Select “画面表示設定” (Menu Design).

「画面表示設定」を選ぶ

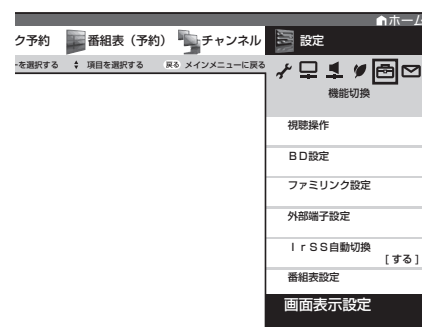

4

Select with



Press



Select “Language (言語)”.

「Language (言語)」を選ぶ



5

Select with



Press




Select “English”.

「English」を選ぶ

Enter.

決定する

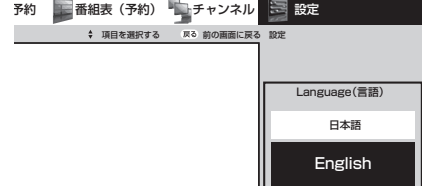

6

Press



Finish this operation.

終了する

- ・ The menu screen is now displayed in English.
- ・ 画面表示が英語になります。

はじめに

準備

番組を見る

録画・録画予約

再生

ハイビジョン

で録画・再生

活用

故障かな仕様

寸法図など

English Guide